



# Promowide SP1790 Charging Port Replacement

Replace the charging port of your Promowide SP1790 wireless speaker.

Written By: Joseph Malone



## INTRODUCTION

This guide will instruct you on how to replace the charging port in this speaker. This will ensure the performance of the device's wireless function.



### TOOLS:

- [Soldering Station](#) (1)
- [Phillips Screwdriver](#) (1)
- [Wire Stripper](#) (1)



### PARTS:


- [Wire](#) (1)
-

## Step 1 — Battery Wire




- Locate the six screws on the back of the speaker.

## Step 2

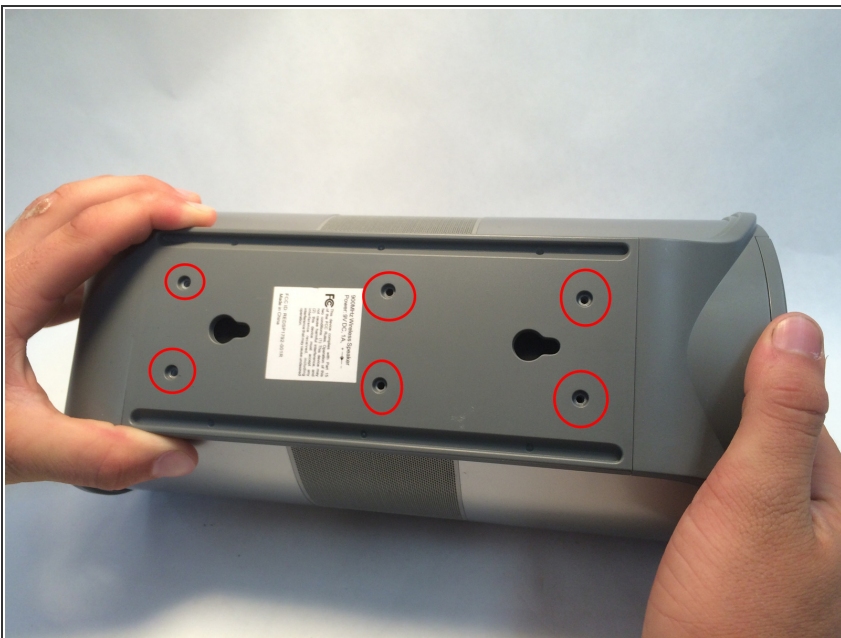

- Unscrew each of the six screws, then set them aside.

## Step 3

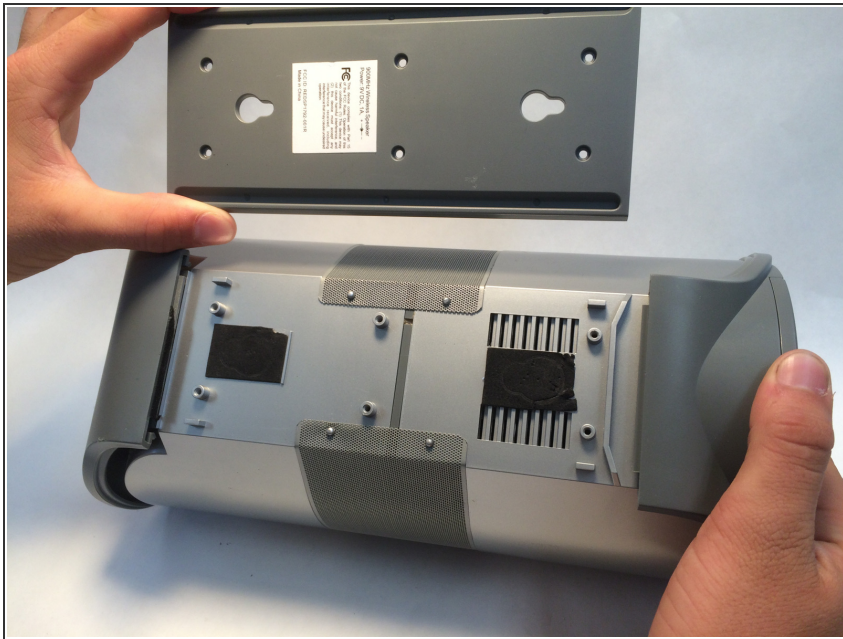

- Gently remove the back cover of the speaker.


## Step 4



- Place the speaker upside down.
- Remove the battery cover located in the center of the speaker.




## Step 5

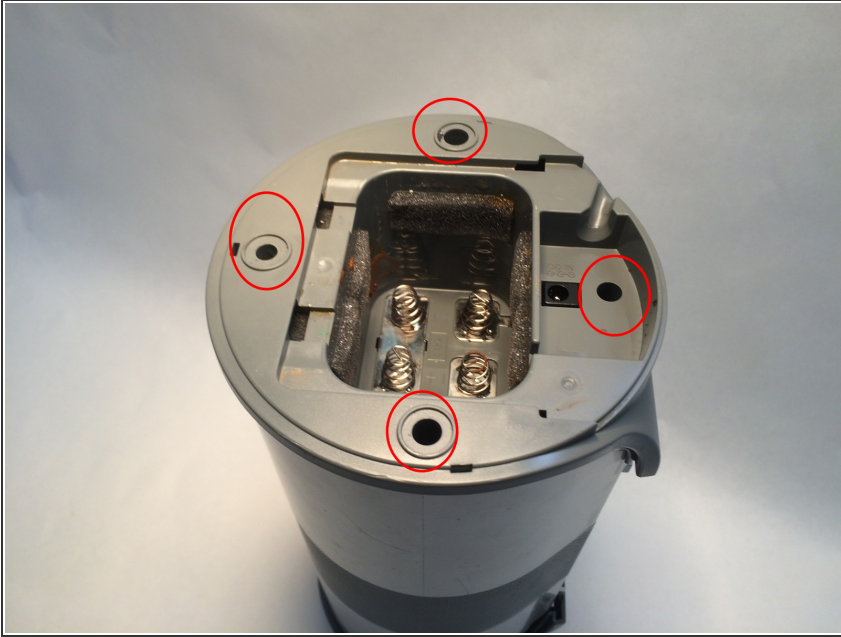


- Locate and remove the four screws under each of the pads near the power socket.

## Step 6

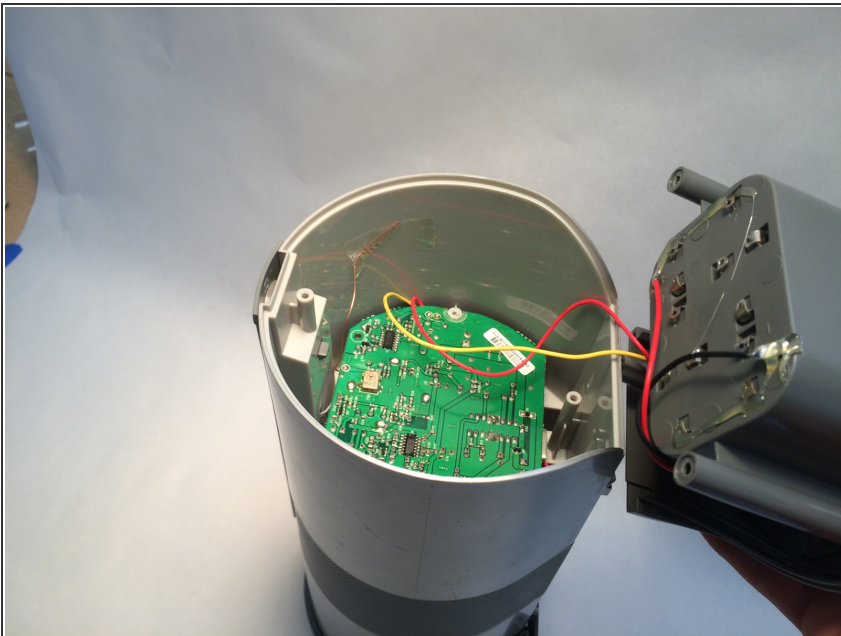


- Gently remove the bottom.
- Do **NOT** pull out or damage wires.

## Step 7

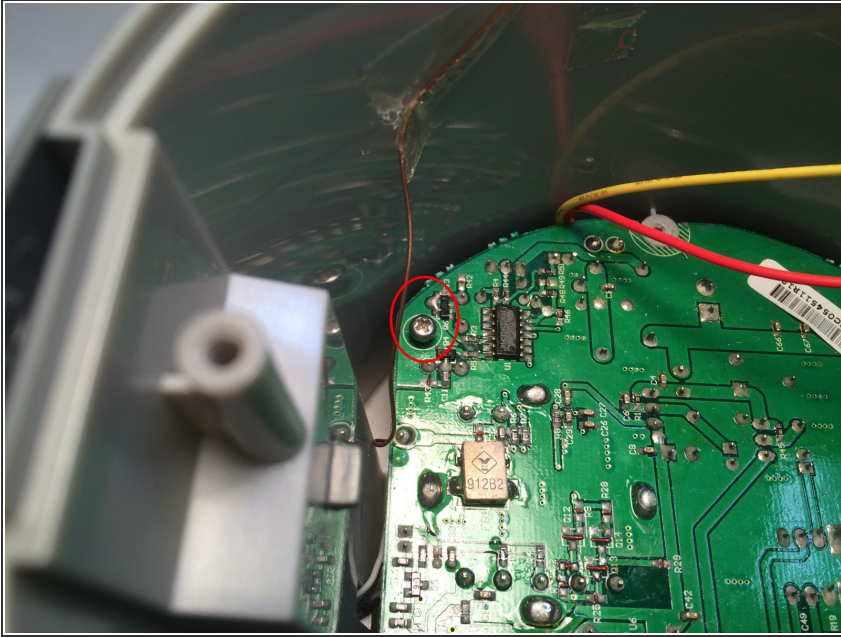


- Locate the single motherboard screw.
- Remove the single motherboard screw.

## Step 8

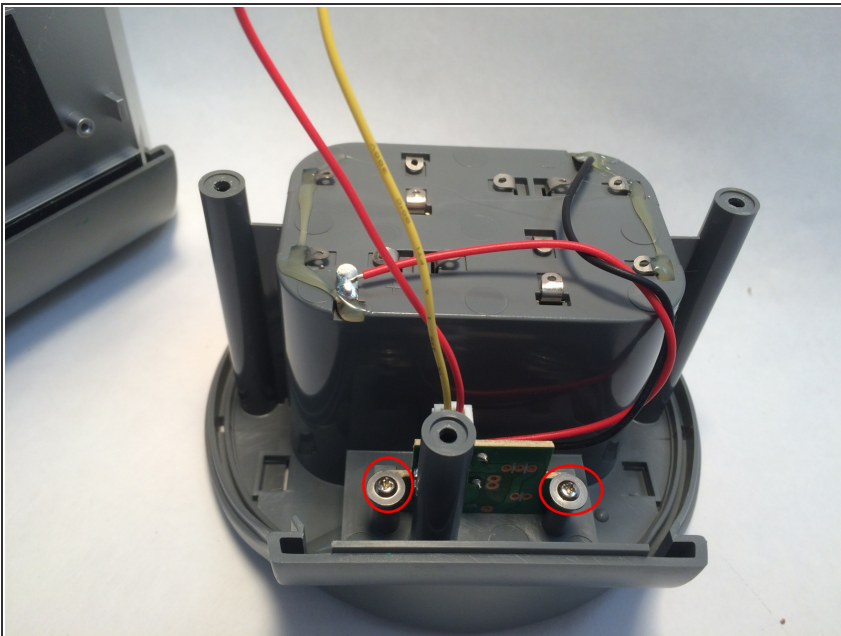

- Locate the screws holding the power socket to the bottom chassis.
- Remove both of the screws holding the power socket to the bottom chassis.

## Step 9

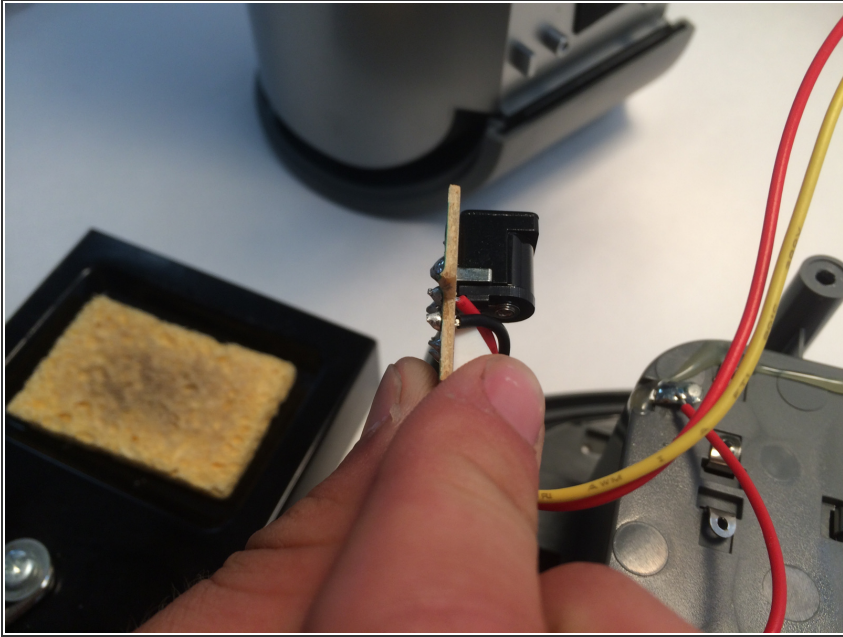

- Unsolder and remove the old wire.
- Insert the new wire and solder it into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-24 05:40:08 PM.